


THE SHARPER IMAGE®

**Chrysler
Crossfire®
CD Stereo
AM/FM Tuner
& Alarm Clock**
with Wireless
Remote Control

GT801 Instructions

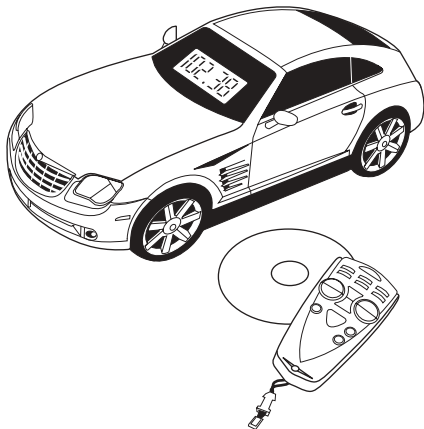

Read and save these instructions.

Dear Sharper Image Customer,

Thank you for your purchase of a Sharper Image product. We appreciate your business very much.

Please accept my personal assurance of your complete satisfaction with this product's quality and performance. We offer generous return privileges and excellent warranties on all our products.

For more than 25 years, The Sharper Image has shared the fun of discovering innovative products that make life better and more enjoyable. We've been in business a long time because we are an exciting place to shop and — just as importantly — we strive to deliver great customer service that exceeds your expectations.

Enjoy your purchase!

Respectfully,



Richard Thalheimer

Founder, Chairman and Chief Executive Officer

*Call 1-800-344-4444 for 24-7 ordering and customer service, or go to **www.sharperimage.com**, our complete online store.*

Table of Contents

Caution	7
Quick Start.....	8
AC Adapter	8
Batteries for the Unit	8
Batteries for Remote Control	8
Clock	9
Radio Operation	9
CD Operation	10
Loading a CD	10
Playing a CD	11
Instructions	12
AC Adapter	12
Batteries for the Unit	12
Batteries for Remote Control.....	13
Radio Operation	13
Antenna	13
Programming Stations into Memory	14
Display Button	14
CD Operation.....	15
Loading a CD	15
Removing a CD	16

Table of Contents

Playing a CD	16
Repeat Play (One Track)	17
Repeat Play (All Tracks)	17
Random Playback	18
Programming CD Tracks	18
Headphones	18
Setting Clock, Sleep and Alarm	20
Clock	20
Sleep	21
Alarm	21
Troubleshooting	23
Statement of FCC/DHHS Compliance	24
FCC Label Compliance Statement	25
Warranty.....	28

Caution

When using adapter, make sure voltage on adapter matches the voltage specified on the stereo. Lower or higher voltages may result in malfunctions, potentially causing fire or other damage.

The CD player employs a laser. Any adjustments, procedures or uses other than those specified here may result in exposure to hazardous radiation.

Unit has no user-serviceable parts. Do not remove cover. Repairs should be made only by a qualified professional.

To prevent fire or electric shock, do not expose unit to rain or moisture.

Remove power plug from socket when not in use.

Remove batteries if unit is not used for long periods of time to prevent potential damage from leaking batteries.

Quick Start

Stereo is powered by 6 AA batteries or AC adapter.

AC Adapter

Plug included 9.5V adapter into jack on rear of car marked “DC IN 9.5V.” Plug adapter into AC outlet.

Batteries for the Unit

1. Remove battery panel on underside of car by removing the screw securing panel and squeezing release tab.
2. Insert 6 AA batteries, matching +/- poles with illustration inside of compartment.
3. Replace battery panel.

Batteries for Remote Control

1. Remove battery panel located underneath the remote.
2. Insert 2 AAA batteries, matching +/- poles with illustration inside of compartment.
3. Replace battery panel.

Clock

1. With the power turned off, press and hold the **MEMORY/SET/CLOCK ADJUST** button. A 24H icon blinks on the LCD.
2. To select 12- or 24-hour time, press the **F.SKIP** or **B.SKIP** button. Press the **MEMORY/SET/CLOCK ADJUST** button again.
3. The hour blinks. To set the hour, press the **F.SKIP** or **B.SKIP** button.
4. Press the **MEMORY/SET/CLOCK ADJUST** button.
5. The minutes blink. To set the minutes, press the **F.SKIP** or **B.SKIP** button.
6. Press the **MEMORY/SET/CLOCK ADJUST** button.


Radio Operation

1. Open hood.
2. To turn the unit on, press the **POWER/ALARM OFF** button. The headlights and taillights illuminate. To turn the headlights and taillights on or off, slide the **ON/OFF** switch to the desired position.
3. Press the **RADIO MODE** button once.

Radio Operation

4. To select either AM or FM, press the **BAND/STOP** button.
5. To tune in a station, press the **F.SKIP** or **B.SKIP** button.
To scan for a station, press, hold and release button.
6. To adjust the volume, press the **VOLUME UP** or **VOLUME DOWN** button.

CD Operation

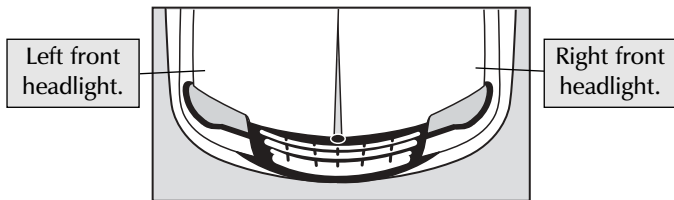

Loading a CD

1. Open hood.
2. To turn the unit on, press the **POWER/ALARM OFF** button.
3. Press the **CD MODE** button.

CD Operation

4. Press the CD door **OPEN/CLOSE** button or left headlight (when facing control panel under the hood) and gently place a disc, with the label facing up, into the tray.
5. To close, press the CD door **OPEN/CLOSE** button or press left headlight again. The CD spins briefly. The total time and number of tracks appear on the LCD.

Playing a CD

1. Ensure there is a CD in the tray. Press the **CD MODE** button. (To play the first 10 seconds of each track, press the **INTRO** button. To stop, press the **BAND/STOP** button.)
2. To begin playing a CD, press the **PLAY/PAUSE** button or right headlight (when facing control panel under the hood). Speakers are housed in the four wheels and the underside of stereo.
3. To pause play, press the **PLAY/PAUSE** button again or press the right headlight. The LCD blinks. To resume play, press the **PLAY/PAUSE** button or right headlight again.
4. To adjust the volume, press the **VOLUME UP** or **VOLUME DOWN** button.
5. To skip forward or backward through the tracks on a disc, press

CD Operation

the **F.SKIP** button or the **B.SKIP** button. To search forward or backward through a particular track, press and hold the **F.SKIP** button or **B.SKIP** button.

6. When the disc has reached the end, it stops automatically. To stop play, press the **BAND/STOP** button.

Instructions

Stereo is powered by 6 AA batteries or AC adapter.

AC Adapter

Plug included 9.5V adapter into jack on rear of car marked "DC IN 9.5V." Plug adapter into AC outlet.

Batteries for the Unit

1. Remove battery panel on underside of car by removing screw securing panel and squeezing release tab.
2. Insert 6 AA batteries, matching +/- poles with illustration inside of compartment.
3. Replace battery panel.

Batteries for Remote Control

1. Remove battery panel located underneath the remote.
2. Insert 2 AAA batteries, matching +/- poles with illustration inside of compartment.
3. Replace battery panel.

Radio Operation

1. Open hood.
2. To turn the unit on, press the **POWER/ALARM OFF** button. The headlights and taillights illuminate. To turn the headlights and taillights on or off, slide the **ON/OFF** switch to the desired position.
3. Press the **RADIO MODE** button once.
4. To select either AM or FM, press the **BAND/STOP** button.
5. To tune in a station, press the **F.SKIP** or **B.SKIP** button. To scan for a station, press, hold and release button.
6. To adjust the volume, press the **VOLUME UP** or **VOLUME DOWN** button.

Antenna

Turn the Crossfire® to achieve the best AM and FM reception.

Radio Operation

Programming Stations into Memory


You can store 10 AM and 10 FM stations into memory.

1. Select the desired band and the station. (See Radio Operation section.)
2. Press the **MEMORY/SET/CLOCK ADJUST** button. The Memory indicator blinks on the LCD.
3. To select the desired memory location, press the **REPEAT/MEMORY UP** button.
4. Press the **MEMORY/SET/CLOCK ADJUST** button.
5. The Memory indicator appears on the LCD. The station is in memory.
6. Press the **REPEAT/MEMORY UP** button to hear programmed stations.

Display Button

When in the Radio mode, press the **DISPLAY** button to see the clock and timer setting. In the CD mode, press the **DISPLAY** button to see time remaining, clock and timer setting.

CD Operation

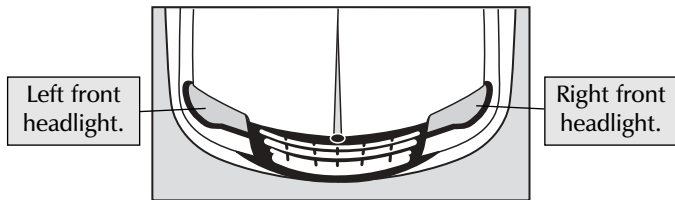

Loading a CD

1. Open hood.
2. To turn the unit on, press the **POWER/ALARM OFF** button.
3. Press the **CD MODE** button.
4. Press the CD door **OPEN/CLOSE** button or left headlight (when facing control panel under the hood) and gently place a disk, with the label facing up, into the tray.
5. To close, press the CD door **OPEN/CLOSE** button. The CD spins briefly. The total time and number of tracks appear on the LCD.

CD Operation

Removing a CD

1. Make sure that the CD has completely stopped or press the **STOP** button.
2. To remove a CD, press the CD door **OPEN/CLOSE** button.
3. Carefully hold the edges of the CD and lift it out.
4. To close the tray, press the CD door **OPEN/CLOSE** button.

Playing a CD

1. Ensure there is a CD in the tray. Press the **CD MODE** button. (To play the first 10 seconds of each track, press the **INTRO** button. To stop, press the **BAND/STOP** button.)
2. To begin playing CD, press the **PLAY/PAUSE** button. Speakers are housed in the four wheels and the underside of stereo.
3. To pause play, press the **PLAY/PAUSE** button again. The LCD blinks. To resume play, press the **PLAY/PAUSE** button or right headlight again.
4. To adjust the volume, press the **VOLUME UP** or **VOLUME DOWN** button.
5. To skip forward or backward through the tracks on a disc,

CD Operation

press the **F.SKIP** button or the **B.SKIP** button. To search forward or backward through a particular track, press and hold the **F.SKIP** button or **B.SKIP** button.

6. When the disc has reached the end, it stops automatically. To stop play, press the **BAND/STOP** button.

Repeat Play (One Track)

Ensure the power is on and a CD has been inserted. Press the **CD MODE** button.

1. Select desired track. To hear the track repeatedly, press the **REPEAT** button once. "REPEAT" blinks on the LCD.
2. Press the **PLAY/PAUSE** button. Adjust the volume as needed.
3. The unit plays the same track repeatedly.
4. Press the **BAND/STOP** button to stop.

Repeat Play (All Tracks)

Ensure the power is on and a CD has been inserted. Press the **CD MODE** button.

1. To hear all tracks repeated, press the **REPEAT** button twice. "REPEAT" appears without blinking on the LCD.

CD Operation

2. Press the **PLAY/PAUSE** button. Adjust the volume as needed.
3. The unit plays all the tracks on the disc repeatedly.
4. To stop, press the **BAND/STOP** button.

Random Playback

Ensure the power is on and a CD has been inserted. Press the **CD MODE** button.

Press the **RANDOM** button once. "RANDOM" appears on the LCD and the unit automatically starts randomly playing the CD tracks.

Programming CD Tracks

Notes:

- To stop the disc before it has reached the end, press the **BAND/STOP** button.
- As each program is played, the track number appears on the LCD.
- Tracks will be played in the order they were programmed.
- To change a programmed track, press the **MEMORY/SET/CLOCK ADJUST** button. To select a new track, press the **F.SKIP** or **B.SKIP** button.

CD Operation

- Each track may be stored in the program memory as many times as desired (up to 20 tracks).
- To check the programmed track, press the **MEMORY** button.

Ensure the power is on and a CD has been inserted. Press the **CD MODE** button.

1. The CD information appears on the LCD. Press the **MEMORY/SET/CLOCK ADJUST** button. "P-01 01" appears on the LCD. To select the first track to be programmed, press the **F.SKIP** or **B.SKIP** button within eight seconds.
2. To set the track into memory, press the **MEMORY/SET/CLOCK ADJUST** button.
3. Repeat these steps to program additional tracks. You can program up to 20 tracks.
4. To begin programmed playback, press the **PLAY/PAUSE** button. Adjust the volume as needed.
5. To skip forward or backward through the programmed tracks, press the **F.SKIP** or **B.SKIP** button. When the disc has reached the end, it stops automatically.

CD Operation

Headphones

Headphones (not included) with a 2.5 mm jack can be plugged into the headphone jack on the back of the unit.

Setting Clock, Sleep and Alarm

Clock

1. With the power turned off, press and hold the **MEMORY/SET/CLOCK ADJUST** button. A 24H icon blinks on the LCD.
2. To select 12- or 24-hour time, press the **F.SKIP** or **B.SKIP** button. Press the **MEMORY/SET/CLOCK ADJUST** button again.
3. The hour blinks. To set the hour, press the **F.SKIP** or **B.SKIP** button.
4. Press the **MEMORY/SET/CLOCK ADJUST** button.
5. The minutes blink. To set the minutes, press the **F.SKIP** or **B.SKIP** button.
6. Press the **MEMORY/SET/CLOCK ADJUST** button.

Setting Clock, Sleep and Alarm

Sleep

1. Turn the unit on.
2. Tune in the desired radio station or press **PLAY** to start playing a CD.
3. Press the **SLEEP** button once. “90” appears on the LCD.
4. To decrease the sleep time by 10 minutes, press the **SLEEP** button repeatedly. Select the sleep time.
5. When the sleep time has been set, “SLEEP” appears on the LCD. The unit will turn off after the selected amount of time has passed. For example, set to 10 and the unit automatically turns off after 10 minutes.
6. To cancel the sleep time, press the **SLEEP** button repeatedly until the radio station appears on the display.

Alarm

Note: The unit automatically turns on and plays the last selected function, either radio or CD. Be sure to select desired radio station or, if you would like to wake to a CD, load a CD into the tray. Adjust the volume.

Setting Clock, Sleep and Alarm

1. With the unit off, press the **ALARM SET SLEEP** button until a clock face blinks on the LCD in lower left hand corner.
2. While the clock face is blinking, press and hold the **MEMORY/SET/CLOCK ADJUST** button. The hour blinks.
3. To set the hour, press the **F.SKIP** or **B.SKIP** button.
4. Press the **MEMORY/SET/CLOCK ADJUST** button. The minutes blink.
5. To set the minutes, press the **F.SKIP** or **B.SKIP** button.
6. To confirm, press the **MEMORY/SET/CLOCK ADJUST** button.
7. After the minutes have been set, the clock face steadily appears on the LCD. The unit will automatically turn on at the set alarm time. To activate the snooze alarm, press the **SNOOZE** button. To turn off the alarm, press the **POWER/ALARM OFF** button. The clock face disappears.
Note: 5 minute snooze.

Troubleshooting

No power:

- Make sure AC adapter plug is fully inserted in jack.
- Check if +/- ends of batteries are properly oriented.

No sound:

- Select correct function key.
- Adjust volume.

No radio:

- Adjust orientation of the stereo to find a stronger signal.
- Turn off nearby appliances that may be causing interference.

CD won't play:

- Press **PLAY/PAUSE** again.
- Select CD function.
- Make sure CD has been inserted with label side facing up.

CD play pauses or skips:

- Use soft, dry cloth to clean disc.
- CD is improperly formatted for play in this stereo.

Statement of FCC/DHHS Compliance

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This product complies with DHHS Rule 21 subchapter J at date of manufacture.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the

Statement of FCC/DHHS Compliance

equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

FCC Label Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

CLASS 1 LASER PRODUCT

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CLASS 1 LASER PRODUCT
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT

LASER SAFETY

This unit employs a laser. Only qualified service personnel should attempt repair.



DANGER: INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED. AVOID DIRECT EXPOSURE TO BEAM.
CAUTION: HAZARDOUS LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED.

California Proposition 65 Required Statement

WARNING: The power cord on this product will expose you to lead, a chemical known to the State of California to cause birth defects or other reproductive harm. ***Wash hands after handling.***

WARRANTY

What Is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

How Long Coverage Lasts

This warranty runs for 90 days from the date of original purchase.

What Is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual, or loss or damage to batteries or removable parts.

What The Sharper Image Will Do

The Sharper Image will repair any defects in materials or workmanship. In the event repair is not possible, The Sharper Image will either replace this product with one of similar features and price, or refund the full purchase price of the product, whichever you prefer.

How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

T.S.I. - Returns Department
2901-A West 60th Street
Little Rock, AR 72209

If you have questions please feel free to contact our customer service representatives at 1-800-344-5555 or by email at care@sharperimage.com.

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

Copyright 2003

Sharper Image Corporation
650 Davis St., San Francisco, CA 94111
(415) 445-6000

Shop online: **www.sharperimage.com**

Due to continuing improvements, actual product may differ slightly from the product described herein.
V2 09/03