TROUBLE SHOOTING

Problem	Possible Cause	Correction
Vehicle runs slowly, or won't move, or won't steer	 Batteries are dead or have a low charge Batteries are not placed in compartment correctly Loose battery connection Main power switch is not in "ON" position Hair, carpet or dirt might be trapped between wheels Resettable fuse activated to cut the circuit and protect the product 	 Check the battery polarity Recharge vehicle battery Replace transmitter battery Check battery connection Turn on power switch Carefully remove such foreign materials Clear the obstacle and wait for 20 seconds to let the resettable fuse cool down and close the circuit again
Loss of control	 Out of control range of distance Weak vehicle battery Weak transmitter battery Radio interference Another radio control vehicle using the same frequency and channel is operated near your vehicle 	 Extend antenna fully Point up in the air, not at vehicle Don't touch antenna Recharge 12V lead-acid battery and/or replace 9V (6LR61) alkaline battery in transmitter Move to another location Race against other vehicles using a different frequency or channel by switching the frequency selectors on the transmitter and the vehicle
Vehicle stops working after going through water, mud or snow	Water in battery/ electronics/ motor areas	 Turn power switch "OFF" IMMEDIATELY, remove lead-acid battery, dry inside and out with clean soft cloth and allow to dry overnight Avoid wet surface, puddles, rain and snow